



## 19300 DynaStep

1120 mm mechanical step DynaStep



### FEATURES

**DynaStep** is the new range of automated mechanical steps manufactured by Me.Ber. The range includes two models, with width ranging from 800 to 1120 mm, both made in high quality materials such as aluminium, steel (for moving and support sections) and high-resistance plastic polymers. The total loading capacity amounts to 300 kg, making the steps suitable for bariatric patients. The DynaStep range may be installed on any commercial vehicle provided with side doors, thanks to specific mounting kits that are available as an optional accessory.

Four strips of non-slip material ensure safe support even in the presence of water and mud.

Opening the step mechanically is dependent on the opening of the side door of the vehicle. This solution is fairly convenient as it prevents inadvertent closing or opening of the step, as well as not relying on electronic devices.

The thickness, identical on the two models, amounts to 65mm and is amongst the slimmest in circulation. This feature ensures that the step is opened in all safety even in the presence of bumps, humps and/or sudden slope changes on the road surface.

The graphic elements on the devices are reflective, which contributes to making the step highly visible at night or in event of poor visibility.

**Platform:** Aluminium

**Pins and rotation elements:** Stainless steel

**Size:** 114 x 26 cm

**Thickness:** 6,5 cm


### MAIN FEATURES

Length (cm)	114
Width (cm)	26
Thickness (cm)	6,5
Weight (kg)	19,3
Loading capacity (kg)	300

---

## IMAGES

---

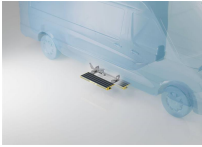

---

## SEE ALSO

---



**DynaStep 19302**  
800 mm mechanical step  
DynaStep

---

## ACCESSORIES

---



**19310**  
FIAT DUCATO Mounting Kit for  
DynaStep mechanical steps



**19312**  
Iveco daily mounting Kit for  
"DynaStep" mechanical steps



**19314**  
Mercedes Sprinter e Volkswagen  
Crafter mounting Kit for DynaStep  
mechanical steps

---